

Safety Key/Reed Switch Troubleshooting

<i>Symptom</i>	<i>Possible Cause</i>	<i>Test Procedure</i>	<i>Repair</i>
<i>Console only displays dashes in the display window – Slot style key.</i>	<i>Safety key or reed switch is positioned incorrectly or safety key has failed.</i>	<i>-Verify that the safety key is in position and that it is secure. -Manually adjust the position of the reed switch trigger and/or the plastic tab on the console shell.</i>	<i>Replace safety key. if plastic tab is broken replace console shell.</i>
	<i>Failed reed switch.</i>	<i>-Short the switch connector on the upper board by using a flat blade screwdriver or by placing a jumper switch on the connector. -Engage reed switch manually to ensure its function</i>	<i>If the upper board still displays dashes then replace upper board. Otherwise replace reed switch.</i>
<i>Console only displays dashes in the display window – Magnet style key.</i>	<i>Safety key is positioned incorrectly or has failed.</i>	<i>-Remove safety key and reapply. -Test magnet.</i>	<i>Replace safety key.</i>
	<i>Failed reed switch.</i>	<i>-Short the switch connector on the upper board by using a flat blade screwdriver or by placing a jumper switch on the connector.</i>	<i>If the upper board still displays dashes then replace upper board. Otherwise replace reed switch.</i>